380 / 9MM 38 / 357 MAG





LOCK-N-LOAD® BULLET FEEDER TUBES

- Works with Hornady[®] feeder dies on progressive presses
- Holds approximately 25 to 42 bullets (depending on bullet length)
- Bullet Feeder Dies are sold separately (Item No. 095330 & 095331)
- Not for use with lead bullets

Hornady Manufacturing Co. P.O. Box 1848 Grand Island, NE 68802 hornady.com



LOCK-N-LOAD®

5637

INSTRUCTIONS FOR BULLET FEEDER TUBE

Hornady bullet feeder tubes have been designed to work only with Hornady pistol bullet feeder dies. Match the correct tube with the die for the caliber you are reloading. Ensuring that there is a cotter pin in the tube, fill the tube with bullets pointed away from the pin. Once full, insert the pin end of the tube into the adjustment screw at the top of the bullet feeder die. Pull the pin to release the bullets, and push down on the tube to seat it completely into the die.